



## DM10 Module

### Update Instructions

1. Download the update files and updater application for your specific kit from the appropriate Alesis product page below. The update files include the **Boot** and **App** files and may also include the **Triggers** and **Sound ROM**, depending on your kit.

[DM10 X Kit](#)

[DM10 X Kit Mesh](#)

[DM10 Studio Kit](#)

[DM10 Studio Kit Mesh](#)

[DM10 Pro Kit](#)

2. Unzip the contents of the **.zip** file to your Desktop.
3. Install the updater application:
  - **Windows:** Double-click the **.exe** file and follow the on-screen instructions.
  - **Mac OS X:** Double-click the **.dmg** file, and then open the **Read Me** file and follow the instructions in the file.
4. Disconnect *all devices except the power adapter* from the DM10 module.
5. Quit any open applications on your computer.
6. Connect the DM10 module to a USB port on your computer's *rear* panel (if possible), and power it on.

7. Press and hold the DM10 module's **Rec** button, power it on, and then release the **Rec** button.

**Windows users:** If you see a **Found New Hardware** message, click **Cancel** and ignore any error messages that you see during this process; they will not affect the update.

8. Open the updater application.
9. **Windows users:** Select the **DM10** port from the **MIDI Interface** menu. On Windows XP, this will be called **USB Audio Device**.
10. Click **File**, select **Open**, and then click the **.syx** file in the **2 - DM10 Boot** folder, but do **NOT** click **Open**.
11. Press and hold the DM10 module's **Rec** button, click **Open** in the updater application, and then release the **Rec** button.

**Note:** If you release the **Rec** button before the update begins, you will see an error message and the DM10 module will not update. If this happens, start over from Step 4.

12. When the DM10 module's display tells you to reboot it, power off the DM10 module.
13. Repeat Steps 7–12 for each other file. The files need to be updated in the following order:

<b>2 - DM10 Boot</b>	<b>(DM10_boot_v#.###.syx)</b>
<b>3 - DM10 App</b>	<b>(DM10_app_v#.###.syx)</b>
<b>4 - DM10 Triggers</b>	<b>(DM10_triggers_V#.###.syx)</b>
<b>5 - DM10 Sound ROM</b>	<b>(DM10_sound_rom-V#.###.syx)</b>

14. After updating all of the files, when the DM10 module's display tells you to reboot it, power off the DM10 module, and then power it back on.



## Initializing the Default Trigger Settings

(for **DM10 Studio Kit**, **DM10 Studio Kit Mesh**, **DM10 X Kit**, and **DM10 X Kit Mesh** only)

Once your DM10 module is updated, initialize the default trigger settings to the correct kit before playing.

1. Power on your DM10 module.
2. Press the **Utility** button.
3. In the screen that appears, choose **F4 (Sys)**.
4. On the next screen, choose **F2 (Init)**.
5. Use the **Cursor Down** button to highlight the **Trigger Settings** option and then press the **F4 (Exec)** button.
6. On the next screen, use the **Cursor Down** button to highlight your drum kit and then press **F1 (Exec)**.

Your DM10 module will return to its Main Screen. It is now set to the default trigger settings for your Alesis drum kit.

## Technical Support

For additional help, visit [alesis.com/support](https://alesis.com/support).